

Flash Wand SINGLE Shooting (Electronic)

A battery-operated flash wand that is silent working. There are no caps to give away this gimmick. At any time during your act you can pick up your wand and shoot fire across the stage that will burst in midair. Reloading is simple, nothing to take apart. Beautifully made with a no-scratch finish. Shoots 10 - 15 feet. Requires Flash Paper, Flash Cotton, and two AA alkaline batteries (not included).

Specifications

Dimensions: 11/16" diameter x 14-1/4"

Ignition: 3 VDC Glo-Plug